Optipoint (Display) Telephones C K R E F E R E N C E G U I D E

EEATUDE DESCRIPTIONS	DIALING INSTRUCTIONS
FEATURE DESCRIPTIONS CALL FORWARDING - ALTERNATE -	DIALING INSTRUCTIONS - Get a dial tone.
Call forwarding (alternate) lets you temporarily	- Get a dial torie.
redirect your incoming calls to another	- Dial the number of the extension that you want to receive
extension.	your calls.
	- Press Check key V OR press the # key.
	- Hang up.
	To cancel forwarding:
	- Get a dial tone.
	- Press # # 9 1.
	- Hang up.
CALL LOG -	- Scroll to CALL LOG?
Allows you to view a log of unanswered, answered, and outgoing calls placed from your	 Press Check key Choose INCOMING CALLS?, OUTGOING CALLS?, OR
extension. Your telephone saves the last	- Choose incoming calls?, ourgoing calls?, or - UNANSWERED?
6 outgoing and the last 12 incoming calls	- ONANGWERED:
in chronological order. The display begins with	
the most recent entry in the log.	
CALLBACK –	- Scroll to CALLBACK?
Allows a user to request a position	- Press Check key 💞
in queue when calling a busy or rings no	- Hang up (phone will ring back with triple ring)
answer.	To cancel:
	- Scroll to View Active Features?
	- Press Check key
	- Scroll to Next Feature?
	- Press Check key
	- Display Callbacks? - Press Check key
	- Press Check Rey - Scroll to Delete?
	- Press Check key
	- Hang up
CONFERENCE -	To set up a conference call:
Allows you to conference up to eight parties	- Dial the first extension number, or dial 8 and the
(including yourself) on a call. (Seven of the	outside number.
the parties can be outside lines).	- Press the TRANSFER key or scroll to START
	CONFERENCE?
	- Dial the next extension number, or dial 8 and the
	outside number.
	- Inform the called party that this is a conference call.
	- Press the TRANSFER key or select CONFERENCE?
	 Repeat steps to join additional parties. To reconnect to the conference when a called
	party isn't joining:
	- Press the connect key.
	To drop the last party:
	- Scroll to REMOVE LAST PARTY?
	- Press Check key
CONSULTATION -	To consult with a second party during a call:
Lets you talk privately with a second party	- Scroll to CONSULT?
while the first party is waiting on hold.	- Press Check key
	- Dial the seond party's number
	OR
	- Press TRANSFER, dial the second party's number.
	To reconnect: - Press the CONNECT key
	OR
	- Scroll to TOGGLE?
	- Press Check key
FWD ALL -	To forward calls:
Forwards your calls directly to phonemail.	- Press FWD ALL key, light will be on and your calls
1	will be forwarded to your phonemail box.
	To cancel forwarding:
	- Press FWD ALL key again.
HOLD -	To put a call on hold while you answer another call or
Feature puts a call on hold until you can	perform another task:
return to it.	- Press the HOLD key.
	- Hang up.
	OR - Scroll to PRIVATE HOLD?
	- Scroll to PRIVATE HOLD? - Press Check key
	To reconnect:
	- Press the line key of the call on hold.
	,

	T
LAST NUMBER REDIAL -	To call your saved number:
Feature automatically redials the last	- Pick up receiver to select LAST NUMBER REDIAL?
extension or outside number (up to 16 digits)	- Press Check key 💜
you dialed.	
PARK -	To park a call using a display phone:
Park lets you transfer a call to an extension	- While connected to caller, scroll to PARK STATION?
and hold it there. The call will not ring at that	- Press Check key 💜
extension. This feature is useful when you	- Dial extension you want to Park the call on.
want to continue a conversation at an idle	- Hang up
extension, or transfer a call to a busy	To connect with a call parked on your extension:
extension.	- Press the CONNECT key.
PICK-UP -	
Group Pick-up lets you answer a call on your	To answer a call in Group Pick-up:
phone that is ringing on any phone in a	- Get dial tone
designated group of phones in your work	- Press the PICK UP key twice OR * * 3
area, without knowing the ringing extension's	To answer a call in Group Pick-up:
number.	To answer a can in Group rick-up.
number.	
Direct Pick-up lets you answer a call to any	To answer a call in Direct Pick-up:
extension, if you know the number. You can	- Get dial tone
also use this feature to pick-up calls that	- Press the PICK UP key OR * 3
are on hold at another extension.	- Dial the number of the ringing extension
Phone Settings -	- Press + or -
Adjust the volume and ring tone of your	- Select either RING VOLUME? or RING PITCH?
phone.	- Press Check key
	- Press + or - to adjust setting. Select to store.
Adjust the volume through your speaker.	- Press + or - to adjust setting.
(NOTE: You must be on a call to adjust)	- Press Check key 💜 to store setting.
Reminder -	- Scroll to PROGRAM/SERVICE?
You can program a timed reminder on your	- Press Check key
telephone to remind yourself of an	- Scroll to REMINDER?
important meeting or appointment.	- Press Check key 💜
	- Display will read NEW REMINDER?
	- Press Check key 💜
	- In put the desired time you would like alarm to sound
	- Select SAVE?
Repertory Dialing (R-) -	To program:
Lets you access a feature and/or dial a	- Scroll to PROGRAM?SERVICE?
telephone number by pressing one key.	- Press Check key
	■ Coloct DECTINATIONS2
	- Select DESTINATIONS?
	- Press Check key
	- Press Check key 💞
	- Press Check key- Scroll to REPDIAL?
	- Press Check key- Scroll to REPDIAL?- Press Check key
	 - Press Check key - Scroll to REPDIAL? - Press Check key - Press an "R-" key
	 - Press Check key - Scroll to REPDIAL? - Press Check key - Press an "R-" key - Enter number
	 - Press Check key - Scroll to REPDIAL? - Press Check key - Press an "R-" key - Enter number - Select SAVE?
	 - Press Check key - Scroll to REPDIAL? - Press Check key - Press an "R-" key - Enter number - Select SAVE? To make a Repdial call:
	 - Press Check key - Scroll to REPDIAL? - Press Check key - Press an "R-" key - Enter number - Select SAVE?
	 - Press Check key - Scroll to REPDIAL? - Press Check key - Press an "R-" key - Enter number - Select SAVE? To make a Repdial call:
	 - Press Check key - Scroll to REPDIAL? - Press Check key - Press an "R-" key - Enter number - Select SAVE? To make a Repdial call: - Press the desired R- key. It will automatically select a line. OR
	 - Press Check key - Scroll to REPDIAL? - Press Check key - Press an "R-" key - Enter number - Select SAVE? To make a Repdial call: - Press the desired R- key. It will automatically select a line. OR - Press a line key
Station Speed Dial -	 - Press Check key - Scroll to REPDIAL? - Press Check key - Press an "R-" key - Enter number - Select SAVE? To make a Repdial call: - Press the desired R- key. It will automatically select a line. OR - Press a line key - Press the desired R- key.
Station Speed Dial - Station Speed Dial (STA SPD) late you got	 - Press Check key - Scroll to REPDIAL? - Press Check key - Press an "R-" key - Enter number - Select SAVE? To make a Repdial call: - Press the desired R- key. It will automatically select a line. OR - Press a line key - Press the desired R- key. To set or change a station speed code using a display phone.
Station Speed Dial (STA SPD) lets you set	 - Press Check key - Scroll to REPDIAL? - Press Check key - Press an "R-" key - Enter number - Select SAVE? To make a Repdial call: - Press the desired R- key. It will automatically select a line. OR - Press a line key - Press the desired R- key. To set or change a station speed code using a display phone. - Scroll to PROGRAM?SERVICE?
Station Speed Dial (STA SPD) lets you set up codes for your frequently called internal	 - Press Check key - Scroll to REPDIAL? - Press Check key - Press an "R-" key - Enter number - Select SAVE? To make a Repdial call: - Press the desired R- key. It will automatically select a line. OR - Press a line key - Press the desired R- key. To set or change a station speed code using a display phone. - Scroll to PROGRAM?SERVICE? - Press Check key
Station Speed Dial (STA SPD) lets you set up codes for your frequently called internal extensions and outside numbers. You can	 - Press Check key - Scroll to REPDIAL? - Press Check key - Press an "R-" key - Enter number - Select SAVE? To make a Repdial call: - Press the desired R- key. It will automatically select a line. OR - Press a line key - Press the desired R- key. To set or change a station speed code using a display phone. - Scroll to PROGRAM?SERVICE? - Press Check key - Select DESTINATIONS?
Station Speed Dial (STA SPD) lets you set up codes for your frequently called internal extensions and outside numbers. You can then dial a two-digit index speed number	- Press Check key - Scroll to REPDIAL? - Press Check key - Press an "R-" key - Enter number - Select SAVE? To make a Repdial call: - Press the desired R- key. It will automatically select a line. OR - Press a line key - Press the desired R- key. To set or change a station speed code using a display phone Scroll to PROGRAM?SERVICE? - Press Check key - Select DESTINATIONS? - Press Check key
Station Speed Dial (STA SPD) lets you set up codes for your frequently called internal extensions and outside numbers. You can	 - Press Check key - Scroll to REPDIAL? - Press Check key - Press an "R-" key - Enter number - Select SAVE? To make a Repdial call: - Press the desired R- key. It will automatically select a line. OR - Press a line key - Press the desired R- key. To set or change a station speed code using a display phone. - Scroll to PROGRAM?SERVICE? - Press Check key - Select DESTINATIONS?
Station Speed Dial (STA SPD) lets you set up codes for your frequently called internal extensions and outside numbers. You can then dial a two-digit index speed number	- Press Check key - Scroll to REPDIAL? - Press Check key - Press an "R-" key - Enter number - Select SAVE? To make a Repdial call: - Press the desired R- key. It will automatically select a line. OR - Press a line key - Press the desired R- key. To set or change a station speed code using a display phone Scroll to PROGRAM?SERVICE? - Press Check key - Select DESTINATIONS? - Press Check key
Station Speed Dial (STA SPD) lets you set up codes for your frequently called internal extensions and outside numbers. You can then dial a two-digit index speed number	- Press Check key - Scroll to REPDIAL? - Press Check key - Press an "R-" key - Enter number - Select SAVE? To make a Repdial call: - Press the desired R- key. It will automatically select a line. OR - Press a line key - Press the desired R- key. To set or change a station speed code using a display phone Scroll to PROGRAM?SERVICE? - Press Check key - Select DESTINATIONS? - Press Check key - Scroll to SPEED DIAL FEATURES? - Press Check key
Station Speed Dial (STA SPD) lets you set up codes for your frequently called internal extensions and outside numbers. You can then dial a two-digit index speed number	- Press Check key - Scroll to REPDIAL? - Press Check key - Press an "R-" key - Enter number - Select SAVE? To make a Repdial call: - Press the desired R- key. It will automatically select a line. OR - Press a line key - Press the desired R- key. To set or change a station speed code using a display phone Scroll to PROGRAM?SERVICE? - Press Check key - Select DESTINATIONS? - Press Check key - Scroll to SPEED DIAL FEATURES? - Press Check key - Enter a index speed number 00 through 29
Station Speed Dial (STA SPD) lets you set up codes for your frequently called internal extensions and outside numbers. You can then dial a two-digit index speed number	- Press Check key - Scroll to REPDIAL? - Press Check key - Press an "R-" key - Enter number - Select SAVE? To make a Repdial call: - Press the desired R- key. It will automatically select a line. OR - Press a line key - Press the desired R- key. To set or change a station speed code using a display phone Scroll to PROGRAM?SERVICE? - Press Check key - Select DESTINATIONS? - Press Check key - Scroll to SPEED DIAL FEATURES? - Press Check key - Enter a index speed number 00 through 29 - Dial number to be stored
Station Speed Dial (STA SPD) lets you set up codes for your frequently called internal extensions and outside numbers. You can then dial a two-digit index speed number	- Press Check key - Scroll to REPDIAL? - Press Check key - Press an "R-" key - Enter number - Select SAVE? To make a Repdial call: - Press the desired R- key. It will automatically select a line. OR - Press a line key - Press the desired R- key. To set or change a station speed code using a display phone Scroll to PROGRAM?SERVICE? - Press Check key - Select DESTINATIONS? - Press Check key - Scroll to SPEED DIAL FEATURES? - Press Check key - Enter a index speed number 00 through 29 - Dial number to be stored - Select SAVE?
Station Speed Dial (STA SPD) lets you set up codes for your frequently called internal extensions and outside numbers. You can then dial a two-digit index speed number	- Press Check key - Scroll to REPDIAL? - Press Check key - Press an "R-" key - Enter number - Select SAVE? To make a Repdial call: - Press the desired R- key. It will automatically select a line. OR - Press a line key - Press the desired R- key. To set or change a station speed code using a display phone Scroll to PROGRAM?SERVICE? - Press Check key - Select DESTINATIONS? - Press Check key - Scroll to SPEED DIAL FEATURES? - Press Check key - Enter a index speed number 00 through 29 - Dial number to be stored - Select SAVE? - Press Check key
Station Speed Dial (STA SPD) lets you set up codes for your frequently called internal extensions and outside numbers. You can then dial a two-digit index speed number	- Press Check key - Scroll to REPDIAL? - Press Check key - Press an "R-" key - Enter number - Select SAVE? To make a Repdial call: - Press the desired R- key. It will automatically select a line. OR - Press a line key - Press the desired R- key. To set or change a station speed code using a display phone Scroll to PROGRAM?SERVICE? - Press Check key - Select DESTINATIONS? - Press Check key - Scroll to SPEED DIAL FEATURES? - Press Check key - Enter a index speed number 00 through 29 - Dial number to be stored - Select SAVE? - Press Check key To make a station speed call using a display phone:
Station Speed Dial (STA SPD) lets you set up codes for your frequently called internal extensions and outside numbers. You can then dial a two-digit index speed number	- Press Check key - Scroll to REPDIAL? - Press Check key - Press an "R-" key - Enter number - Select SAVE? To make a Repdial call: - Press the desired R- key. It will automatically select a line. OR - Press a line key - Press the desired R- key. To set or change a station speed code using a display phone Scroll to PROGRAM?SERVICE? - Press Check key - Select DESTINATIONS? - Press Check key - Scroll to SPEED DIAL FEATURES? - Press Check key - Enter a index speed number 00 through 29 - Dial number to be stored - Select SAVE? - Press Check key To make a station speed call using a display phone: - Press STA SPD
Station Speed Dial (STA SPD) lets you set up codes for your frequently called internal extensions and outside numbers. You can then dial a two-digit index speed number	- Press Check key - Scroll to REPDIAL? - Press Check key - Press an "R-" key - Enter number - Select SAVE? To make a Repdial call: - Press the desired R- key. It will automatically select a line. OR - Press a line key - Press the desired R- key. To set or change a station speed code using a display phone Scroll to PROGRAM?SERVICE? - Press Check key - Select DESTINATIONS? - Press Check key - Scroll to SPEED DIAL FEATURES? - Press Check key - Enter a index speed number 00 through 29 - Dial number to be stored - Select SAVE? - Press Check key To make a station speed call using a display phone:
Station Speed Dial (STA SPD) lets you set up codes for your frequently called internal extensions and outside numbers. You can then dial a two-digit index speed number	- Press Check key - Scroll to REPDIAL? - Press Check key - Press an "R-" key - Enter number - Select SAVE? To make a Repdial call: - Press the desired R- key. It will automatically select a line. OR - Press a line key - Press the desired R- key. To set or change a station speed code using a display phone Scroll to PROGRAM?SERVICE? - Press Check key - Select DESTINATIONS? - Press Check key - Scroll to SPEED DIAL FEATURES? - Press Check key - Enter a index speed number 00 through 29 - Dial number to be stored - Select SAVE? - Press Check key To make a station speed call using a display phone: - Press STA SPD
Station Speed Dial (STA SPD) lets you set up codes for your frequently called internal extensions and outside numbers. You can then dial a two-digit index speed number (00 - 29) instead of dialing the whole number.	- Press Check key - Scroll to REPDIAL? - Press Check key - Press an "R-" key - Enter number - Select SAVE? To make a Repdial call: - Press the desired R- key. It will automatically select a line. OR - Press a line key - Press the desired R- key. To set or change a station speed code using a display phone Scroll to PROGRAM?SERVICE? - Press Check key - Select DESTINATIONS? - Press Check key - Scroll to SPEED DIAL FEATURES? - Press Check key - Enter a index speed number 00 through 29 - Dial number to be stored - Select SAVE? - Press Check key To make a station speed call using a display phone: - Press STA SPD - Dial the two-digit index speed code To transfer a call:
Station Speed Dial (STA SPD) lets you set up codes for your frequently called internal extensions and outside numbers. You can then dial a two-digit index speed number (00 - 29) instead of dialing the whole number. Transfer - The Transfer feature allows you to transfer	- Press Check key - Scroll to REPDIAL? - Press Check key - Press an "R-" key - Enter number - Select SAVE? To make a Repdial call: - Press the desired R- key. It will automatically select a line. OR - Press a line key - Press the desired R- key. To set or change a station speed code using a display phone Scroll to PROGRAM?SERVICE? - Press Check key - Select DESTINATIONS? - Press Check key - Scroll to SPEED DIAL FEATURES? - Press Check key - Enter a index speed number 00 through 29 - Dial number to be stored - Select SAVE? - Press Check key To make a station speed call using a display phone: - Press STA SPD - Dial the two-digit index speed code To transfer a call: - Ask the party to hold.
Station Speed Dial (STA SPD) lets you set up codes for your frequently called internal extensions and outside numbers. You can then dial a two-digit index speed number (00 - 29) instead of dialing the whole number. Transfer - The Transfer feature allows you to transfer a call from your telephone to another	- Press Check key - Scroll to REPDIAL? - Press Check key - Press an "R-" key - Enter number - Select SAVE? To make a Repdial call: - Press the desired R- key. It will automatically select a line. OR - Press a line key - Press the desired R- key. To set or change a station speed code using a display phone Scroll to PROGRAM?SERVICE? - Press Check key - Select DESTINATIONS? - Press Check key - Scroll to SPEED DIAL FEATURES? - Press Check key - Enter a index speed number 00 through 29 - Dial number to be stored - Select SAVE? - Press Check key To make a station speed call using a display phone: - Press STA SPD - Dial the two-digit index speed code To transfer a call: - Ask the party to hold Press the TRANSFER key OR scroll to START TRANSFER?
Station Speed Dial (STA SPD) lets you set up codes for your frequently called internal extensions and outside numbers. You can then dial a two-digit index speed number (00 - 29) instead of dialing the whole number. Transfer - The Transfer feature allows you to transfer	- Press Check key - Scroll to REPDIAL? - Press Check key - Press an "R-" key - Enter number - Select SAVE? To make a Repdial call: - Press the desired R- key. It will automatically select a line. OR - Press a line key - Press the desired R- key. To set or change a station speed code using a display phone Scroll to PROGRAM?SERVICE? - Press Check key - Select DESTINATIONS? - Press Check key - Scroll to SPEED DIAL FEATURES? - Press Check key - Enter a index speed number 00 through 29 - Dial number to be stored - Select SAVE? - Press Check key To make a station speed call using a display phone: - Press STA SPD - Dial the two-digit index speed code To transfer a call: - Ask the party to hold Press the TRANSFER key OR scroll to START TRANSFER? - Dial the extension number.
Station Speed Dial (STA SPD) lets you set up codes for your frequently called internal extensions and outside numbers. You can then dial a two-digit index speed number (00 - 29) instead of dialing the whole number. Transfer - The Transfer feature allows you to transfer a call from your telephone to another	- Press Check key - Scroll to REPDIAL? - Press Check key - Press an "R-" key - Enter number - Select SAVE? To make a Repdial call: - Press the desired R- key. It will automatically select a line. OR - Press a line key - Press the desired R- key. To set or change a station speed code using a display phone Scroll to PROGRAM?SERVICE? - Press Check key - Select DESTINATIONS? - Press Check key - Scroll to SPEED DIAL FEATURES? - Press Check key - Enter a index speed number 00 through 29 - Dial number to be stored - Select SAVE? - Press Check key To make a station speed call using a display phone: - Press STA SPD - Dial the two-digit index speed code To transfer a call: - Ask the party to hold Press the TRANSFER key OR scroll to START TRANSFER? - Dial the extension number When the party answers, announce the caller
Station Speed Dial (STA SPD) lets you set up codes for your frequently called internal extensions and outside numbers. You can then dial a two-digit index speed number (00 - 29) instead of dialing the whole number. Transfer - The Transfer feature allows you to transfer a call from your telephone to another	- Press Check key - Scroll to REPDIAL? - Press Check key - Press an "R-" key - Enter number - Select SAVE? To make a Repdial call: - Press the desired R- key. It will automatically select a line. OR - Press a line key - Press the desired R- key. To set or change a station speed code using a display phone Scroll to PROGRAM?SERVICE? - Press Check key - Select DESTINATIONS? - Press Check key - Scroll to SPEED DIAL FEATURES? - Press Check key - Enter a index speed number 00 through 29 - Dial number to be stored - Select SAVE? - Press Check key To make a station speed call using a display phone: - Press STA SPD - Dial the two-digit index speed code To transfer a call: - Ask the party to hold Press the TRANSFER key OR scroll to START TRANSFER? - Dial the extension number When the party answers, announce the caller - Hang up. The transfer is complete
Station Speed Dial (STA SPD) lets you set up codes for your frequently called internal extensions and outside numbers. You can then dial a two-digit index speed number (00 - 29) instead of dialing the whole number. Transfer - The Transfer feature allows you to transfer a call from your telephone to another	- Press Check key - Scroll to REPDIAL? - Press Check key - Press an "R-" key - Enter number - Select SAVE? To make a Repdial call: - Press the desired R- key. It will automatically select a line. OR - Press a line key - Press the desired R- key. To set or change a station speed code using a display phone Scroll to PROGRAM?SERVICE? - Press Check key - Select DESTINATIONS? - Press Check key - Scroll to SPEED DIAL FEATURES? - Press Check key - Enter a index speed number 00 through 29 - Dial number to be stored - Select SAVE? - Press Check key To make a station speed call using a display phone: - Press STA SPD - Dial the two-digit index speed code To transfer a call: - Ask the party to hold Press the TRANSFER key OR scroll to START TRANSFER? - Dial the extension number When the party answers, announce the caller
Station Speed Dial (STA SPD) lets you set up codes for your frequently called internal extensions and outside numbers. You can then dial a two-digit index speed number (00 - 29) instead of dialing the whole number. Transfer - The Transfer feature allows you to transfer a call from your telephone to another	- Press Check key - Scroll to REPDIAL? - Press Check key - Press an "R-" key - Enter number - Select SAVE? To make a Repdial call: - Press the desired R- key. It will automatically select a line. OR - Press a line key - Press the desired R- key. To set or change a station speed code using a display phone Scroll to PROGRAM?SERVICE? - Press Check key - Select DESTINATIONS? - Press Check key - Scroll to SPEED DIAL FEATURES? - Press Check key - Enter a index speed number 00 through 29 - Dial number to be stored - Select SAVE? - Press Check key To make a station speed call using a display phone: - Press STA SPD - Dial the two-digit index speed code To transfer a call: - Ask the party to hold Press the TRANSFER key OR scroll to START TRANSFER? - Dial the extension number When the party answers, announce the caller - Hang up. The transfer is complete